

# STOP!

**Do not install until you have read these instructions  
Call 800.465.6909 with any questions**

## **HANDLING AND INSTALLATION INSTRUCTIONS**

**Stitched™ Horizontal  
(MR-SH series)**

**See supplemental instructions on page three for trimming instructions.  
Rolls are graded for optimal installation. Start installing with Roll #1.**

### **QUICK FACTS**

- Paste: Maya Romanoff's MR-RA-888-1 or MR-RA-888-5 or a good quality clear, strippable, pre-mixed, vinyl adhesive.
- Table-trim.
- Walls should be mirror-smooth.
- Prepaste the wall at seams.
- Relax 2-4 minutes.
- Half-drop installation method.
- Please read the following installation instructions before proceeding.
- **IF YOU DO NOT FOLLOW OUR INSTALLATION INSTRUCTIONS, MAYA ROMANOFF WILL NOT ACCEPT RESPONSIBILITY FOR THE INSTALLATION—YOU WILL BE INSTALLING AT YOUR OWN RISK.**

### **GENERAL GUIDELINES**

- **Rolls are graded for optimal installation. Start installing with Roll #1.**
- Inspect goods carefully. No returns on cut goods. Grade carefully for color flow.
- Confirm that you have the correct color and product before installing. Additional yardage from this dye lot may not be available.
- **No allowances will be made after THREE (3) drops—Call 800.465.6909 immediately if you encounter any difficulties.**
- No claims allowed for labor charges or consequential damages under any conditions.
- Wallcoverings can display certain irregularities that are inherent to the manufacturing process.
- Walls should be mirror-smooth. Lining paper should be used if walls have imperfections.
- **NO SIDE MATCH IN HORIZONTAL STRIAE. HORIZONTAL STITCH PATTERN REPEATS EVERY SIX INCHES.**
- **RECOMMENDED INSTALLATION: HALF DROP. SEE PAGE 3.**

### **ACTIONS TO AVOID**

- Do not rub face of the product with a stiff brush.
- Do not crease wallcovering.
- Do not pull panels once they have been placed on the wall: this will cause the seams to open after the product dries.
- Do not use a seam roller to set the seams. Instead, use a plastic sweep.
- Avoid soaking the paper in water or getting the wallcovering excessively wet. This can cause shrinkage and opening of seams as the wallcovering dries.
- Avoid direct or bright reflected sunlight. Not guaranteed against fading or color change.

05/01/11

CONTINUED



**MAYA ROMANOFF**

Chicago Headquarters: 3435 Madison, Skokie, IL 60076 † 1.773.465.6909 † 1.773.465.7089 www.mayaromanoff.com

1

# STOP!

**Do not install until you have read these instructions  
Call 800.465.6909 with any questions**

## **HANDLING AND INSTALLATION INSTRUCTIONS**

### **Stitched™ Horizontal (MR-SH series)**

**See supplemental instructions on page three for trimming instructions.  
Rolls are graded for optimal installation. Start installing with Roll #1.**

#### **WALL PREPARATION**

- Paint the wall the color of the product with a good quality, non-sealing flat latex wallpaint. Avoid super sealing wall prep products. They can cause product to bubble.
- Do not install on sealed walls without hanging lining paper.
- Walls must be completely dry before installation can begin.

#### **TRIMMING**

- Trim with a very sharp, single edge razor blade to true. **USE A NEW BLADE FOR EACH CUT.**
- Trim the product on a table.
- See Trimming Instructions on Page 3.

#### **ADHESIVE**

- Use Maya Romanoff's MR-RA-888-1 or MR-RA-888-5 or a good quality CLEAR, STRIPPABLE, PRE-MIXED, VINYL adhesive\*.
- Put adhesive on the wall at the seam lines. This will help the seams set firmly.
- Low water content is very important to trouble-free installations. In cases of super-saturated color, the color may bleed. **THIS IS NORMAL AND WILL NOT AFFECT THE FINAL INSTALLATION.**

#### **HANGING**

- Adhere product to the wall using a soft bristled nylon brush.
- Gently smooth product to the wall using a plastic smoother. Smooth continuously to remove any bubbles.
- Go back and ensure all bubbles are smoothed out before leaving. Any bubbles left upon completion of install will be permanent.
- Paper may lift around stitched lines. Use a soft, clean rag to smooth stitched lines firmly to the wall.

#### **RELAXING TIME**

- It is essential to allow wallcoverings sufficient relaxing time to avoid bubbling, shrinking and seam opening. Allow the paste enough time to soak into a sheet before hanging.
- Usual relaxing time: 2-4 minutes
- Do a small test strip to determine the proper relaxing time.
- **WIPE OFF EXCESS PASTE IMMEDIATELY WITH A SOFT DAMP CLOTH. DO NOT SCRUB. DO NOT RUB.**

\*For more information on Maya Romanoff's MR-RA-888-1 or MR-RA-888-5, check out [www.mayaromanoff.com](http://www.mayaromanoff.com).

05/01/11

CONTINUED



**MAYA ROMANOFF®**

Chicago Headquarters: 3435 Madison, Skokie, IL 60076 t 1.773.465.6909 f 1.773.465.7089 [www.mayaromanoff.com](http://www.mayaromanoff.com)

# STOP!

**Do not install until you have read these instructions  
Call 800.465.6909 with any questions**

## **HANDLING AND INSTALLATION INSTRUCTIONS**


Stitched™ Horizontal  
(MR-SH series)

**See supplemental instructions on page three for trimming instructions.  
Rolls are graded for optimal installation. Start installing with Roll #1.**

### **SUPPLEMENTAL TRIMMING INSTRUCTIONS**

- Product should be trimmed before installing.
- Allowable selvage is 1/2 inch on each edge.
- Recommended installation method: Half Drop (see diagram below)

HORIZONTAL STITCHED PATTERN SHOWN WITH DOTTED LINES

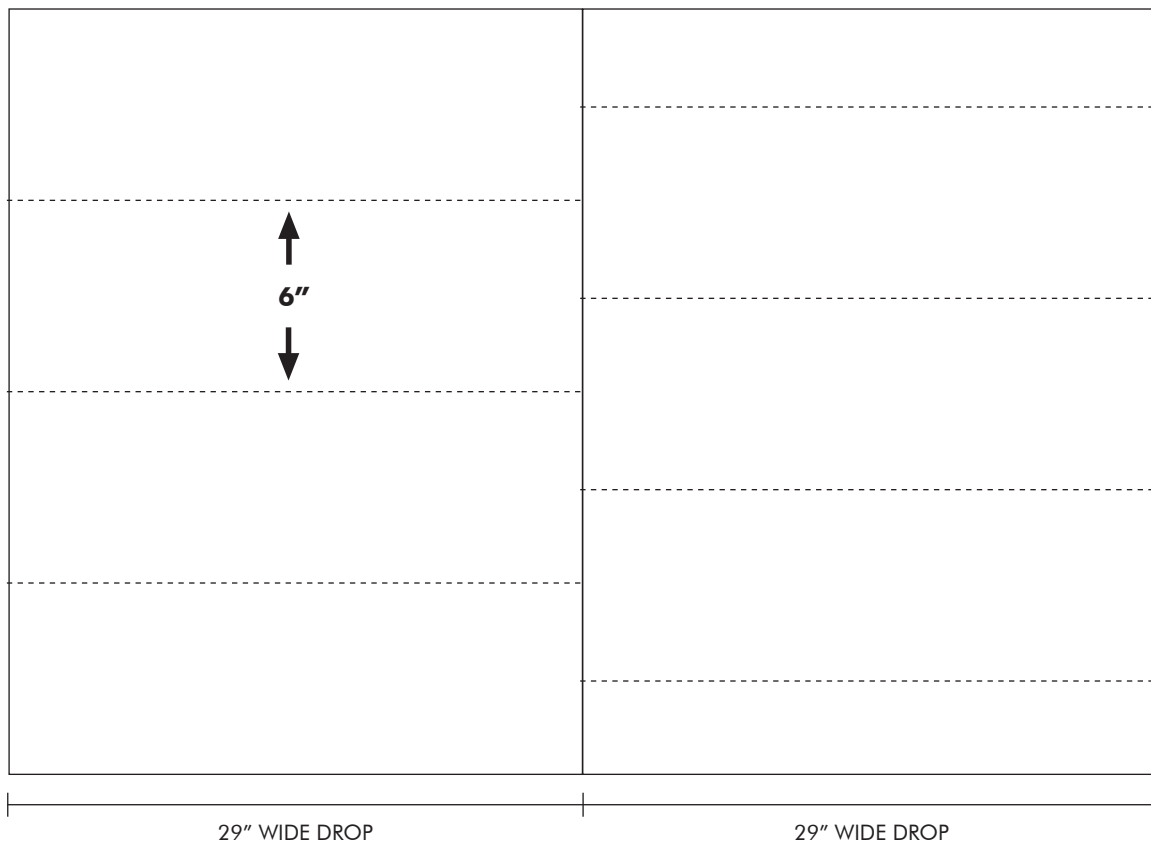

05/01/11

