

STOP!

**Do not install until you have read these instructions
Call 800.465.6909 with any questions**

HANDLING AND INSTALLATION INSTRUCTIONS

True Paper Croc™ Wallcovering (MR-TP series)

QUICK FACTS

- Paste: Maya Romanoff's MR-RA-888-1 or MR-RA-888-5 or a good quality clear, strippable, pre-mixed, vinyl adhesive.
- Double-cut on the wall.
- Wall should have a Level 5 finish.
- Relax 5-7 minutes.
- Please read the following installation instructions before proceeding.
- **IF YOU DO NOT FOLLOW OUR INSTALLATION INSTRUCTIONS, MAYA ROMANOFF WILL NOT ACCEPT RESPONSIBILITY FOR THE INSTALLATION—YOU WILL BE INSTALLING AT YOUR OWN RISK.**

GENERAL GUIDELINES

- Repeat: 6.5" horizontal x 7.25" vertical
- Inspect goods carefully. No returns on cut goods.
- Confirm that you have the correct color and product before installing. Additional yardage from this dye lot may not be available.
- **No allowances will be made after THREE (3) drops—Call 800.465.6909 immediately if you encounter any difficulties.**
- No claims allowed for labor charges or consequential damages under any conditions.
- Wallcoverings can display certain irregularities that are inherent to the manufacturing process.

ACTIONS TO AVOID

- Do not let paste dry on the face of the product.
- Do not rub face of the product with a stiff brush.
- Do not pull panels once they have been placed on the wall: this will cause the seams to open after the product dries.
- Avoid direct or bright sunlight. Not guaranteed against fading or color change.

05/01/11

CONTINUED



MAYA ROMANOFF

Chicago Headquarters: 3435 Madison, Skokie, IL 60076 † 1.773.465.6909 † 1.773.465.7089 www.mayaromanoff.com

1

STOP!

**Do not install until you have read these instructions
Call 800.465.6909 with any questions**

HANDLING AND INSTALLATION INSTRUCTIONS

True Paper Croc™ Wallcovering (MR-TP series)

WALL PREPARATION

- Paint the wall the color of the product with a good quality, non-sealing flat latex wallpaint.
- Do not install on sealed walls without hanging lining paper.
- Walls should be mirror-smooth—a Level 5 finish.
- Walls must be completely dry before installation can begin.

TRIMMING

- Trim with a very sharp, single edge razor blade. **USE A NEW BLADE FOR EACH CUT.**
- Trim approximately 3" to match pattern per diagram below.
- Best results achieved when product is double cut on the wall.

ADHESIVE

- Use Maya Romanoff's MR-RA-888-1 or MR-RA-888-5 or a good quality CLEAR, STRIPPABLE, PRE-MIXED, VINYL adhesive*.
- Apply evenly and adequately. Apply paste thicker where seams will fall.
- Avoid getting paste on face of the wallcovering.
- Paste back of paper and let relax approximately 5-7 minutes. Smooth glue with dry roller and hang.

HANGING


- Smooth product to the wall using a plastic smoother. Smooth continuously to remove any bubbles.
- Do not smooth face of product with a bristle brush or any other textured smoothing implement.

*For more information on Maya Romanoff's MR-RA-888-1 or MR-RA-888-5, check out www.mayaromanoff.com.

RECOMMENDED TRIMMING

YES


DO seam Croc on
small vertical stripes.

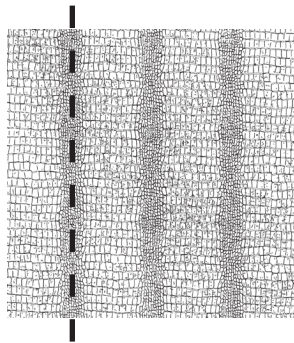

CORRECT Trimming Placement

NO

DO NOT seam Croc
on large vertical stripes.

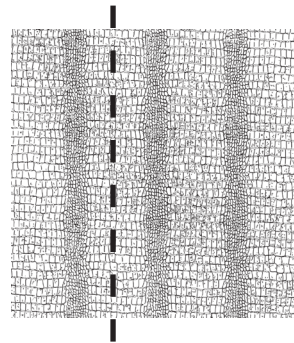

INCORRECT Trimming Placement

05/01/11



MAYA ROMANOFF®

Chicago Headquarters: 3435 Madison, Skokie, IL 60076 t 1.773.465.6909 f 1.773.465.7089 www.mayaromanoff.com